

Remote Control


Models 20.0 & 20.1

Quick Start Guide



Turn On Your Remote

- 1 Remove the *PULL* tab on the back of your remote control

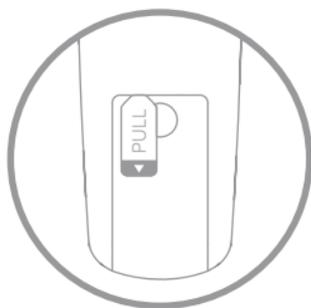


- 2 Press *SYSTEM INFO* on your receiver



The appearance and location of the *SYSTEM INFO* button varies from receiver to receiver

This button is located behind a door on the front of some receivers

- 3 Press *SAT* and then *RECORD* on your remote

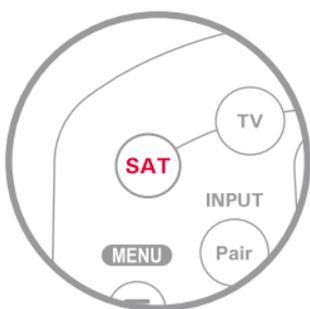


- 4 Select *Done* on the screen



Pair Your Remote

- 1 Press and hold the device button you want to program until all four device buttons light up

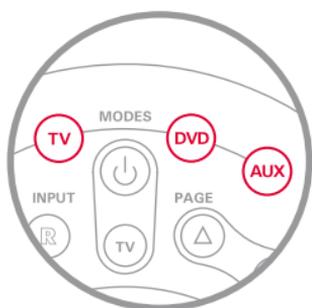

Press and hold

- *TV* to pair with your TV
- *DVD* or *AUX* to pair with any other device

- 2 Enter the three-digit code for your device while the device buttons are lit up



See *Device Codes* in this guide

- 3 Press #



The device button you selected will flash three times

- 4 Press the device power button



Your device will turn on or off

Ensure you are within ten feet of your device, pointing the remote control directly at it

If your device does not turn off or on, return to step **1**, trying a different code for the manufacturer of your device

Explore Your Remote

Device Power

Turn your DISH receiver—or another device you are controlling—on or off

Input

Change your TV's input when in TV mode

Menu

Access your receiver's features and settings

Recall

Return to the last channel you were watching

Info

Get more information about the program you're watching or one you've highlighted

Search


Find your favorite TV shows, movies, and sports


Colored Buttons

Access options and features available on the current menu

Picture in Picture (PiP)

Control PiP windows and their orientations

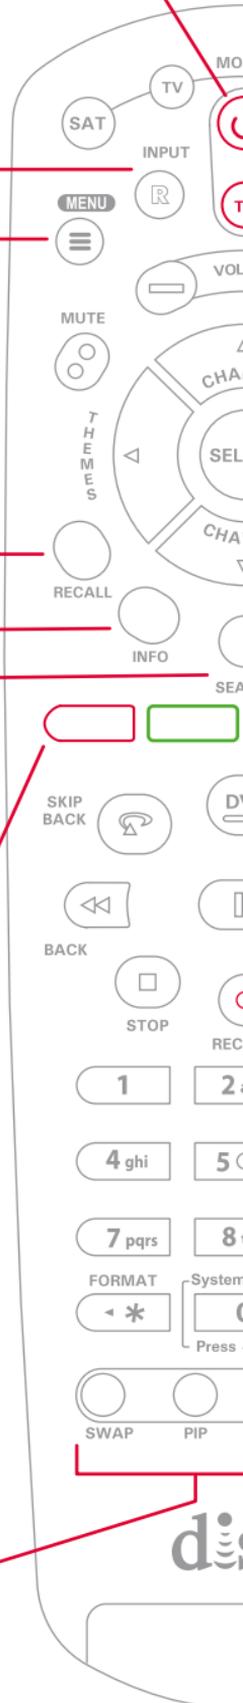

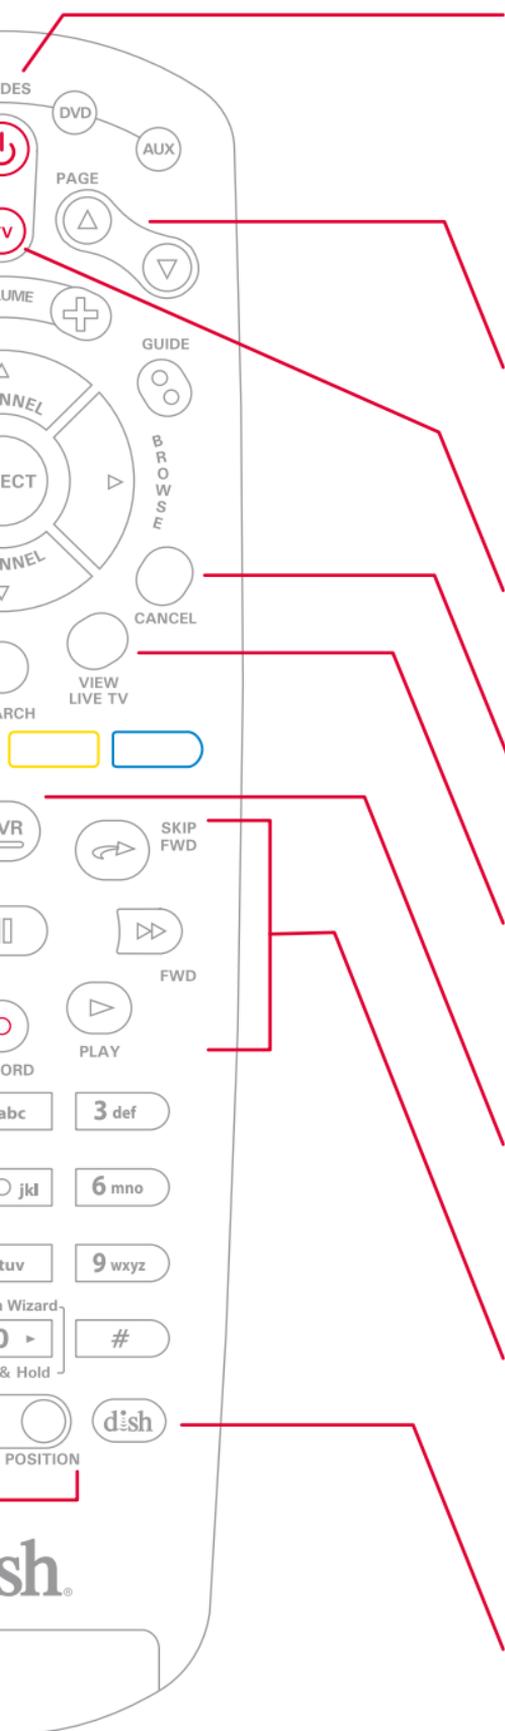

Device Buttons

Change the device you want to control: SAT (your DISH receiver), TV, Blu-ray/DVD player, or auxiliary device

Page Up & Down

Page through menus such as the *Guide*

TV Power

Turn your TV on or off

Cancel

Go back one menu

View Live TV

Return to the program you are watching

DVR

Access your recorded TV shows and movies

Playback Control

While watching TV, use these buttons to pause, rewind, fast-forward, record, and more

DISH

Go to the DishHOME interactive TV app

Device Codes

Popular Manufacturer Codes

If your device's code isn't listed, visit mydish.com/remote-codes

Bose	<i>Audio</i> 656 780 761 535
Denon	<i>Audio</i> 669 762
Harman/Kardon	<i>Audio</i> 640 725
Insignia	<i>TV</i> 834 538 533 720 539 727 411 751
JBL	<i>Audio</i> 642
LG	<i>TV</i> 627 615 505 520 421 733 553 848
Magnavox	<i>TV</i> 560 566 829 747 579 550
Onkyo	<i>Audio</i> 785 671 788
Panasonic	<i>TV</i> 512 876 780 811 577 508 784 765 <i>DVD</i> 627 855 782 <i>Audio</i> 810 799 783 817 643 677 678
Philips	<i>TV</i> 747 827 566 550 627 658 <i>DVD</i> 565 801 554 556
Pioneer	<i>TV</i> 547 <i>DVD</i> 719 665 754 <i>Audio</i> 845 664 666 772
RCA	<i>TV</i> 831 627 503
Samsung	<i>TV</i> 680 738 601 004 681 880 727 908 <i>DVD</i> 643 668 900 644 506
Sanyo	<i>TV</i> 590 683 726
Sharp	<i>TV</i> 628 835 505 178
Sony	<i>TV</i> 500 837 590 677
Toshiba	<i>TV</i> 852 757 631
VIZIO	<i>TV</i> 505 523 598 627 720 520
Westinghouse	<i>TV</i> 795 553 738 500 720
Yamaha	<i>Audio</i> 786 848

If you're pairing an *AUX* device, precede the three-digit code with

- 0 for a TV (enter 0500 for code 500)
- 1 for a DVD or Blu-ray player
- 2 for any other device

Regulatory Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by following one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device may void your authority to operate this equipment.

Safety Instructions

You must keep safety in mind while using this device. Keep these and any other instructions for future reference.

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

Heat: Do NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

Case and Use

Cleaning: Do NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When Not in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.



WARNING - This product can expose you to Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.



Do NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

Need Help?



mydish.com/support/products/remotes/20x



1.800.333.DISH (3474)



TUNED IN TO YOU™